


ROOFING DETAILS ACU-CAULK, ACU-FABRIC SYSTEM

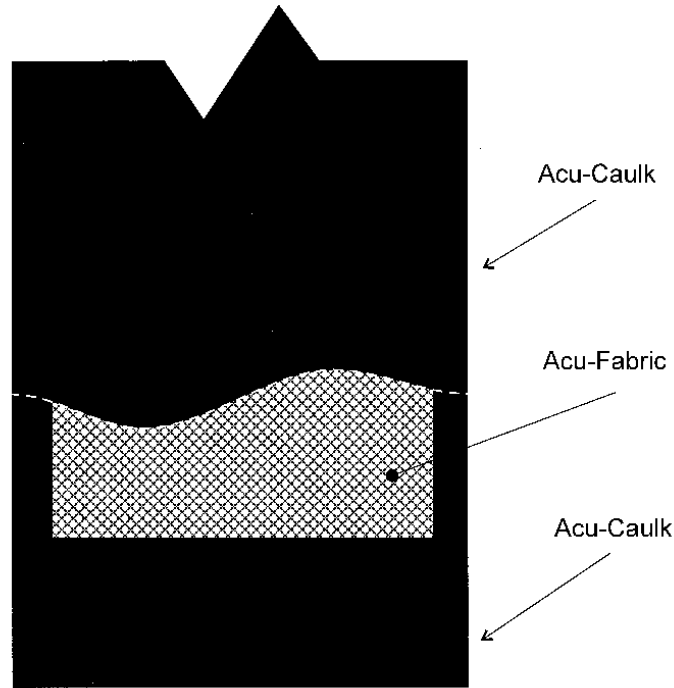

1. Apply a heavy coat of ACU-CAULK:BG around the area to be detailed. Place an appropriate strip of ACU-FABRIC onto the wet ACU-CAULK:BG.
2. Work ACU-FABRIC into ACU-CAULK:BG using a brush, roller, or soft bristle deck broom to eliminate air pockets, puckers, wrinkles, gaps or folds,
3. Apply a second ACU-CAULK:BG as necessary to fully encapsulate the ACU-FABRIC. Make sure to extend the ACU-CAULK:BG at least 4" past the ACU-FABRIC.

Our suggested installation specifications are based on information from laboratory and field testing which we believe to be reliable and correct; however, accuracy and completeness of said tests are not guaranteed and not to be construed as a warranty, either expressed or implied. Since the use of the material is beyond manufacturer's control, buyer assumes all risk whatsoever as to their use or results obtained. We guarantee our products to conform to Advanced Coating Systems, Inc. quality control. Advanced Coating Systems, Inc. warrants only the standard quality of material. Manufacturer's sole responsibility shall be to replace that portion of the product of this manufacturer which proved to be defective.