


## ROOFING DETAILS NEW SUPPORT BLOCK

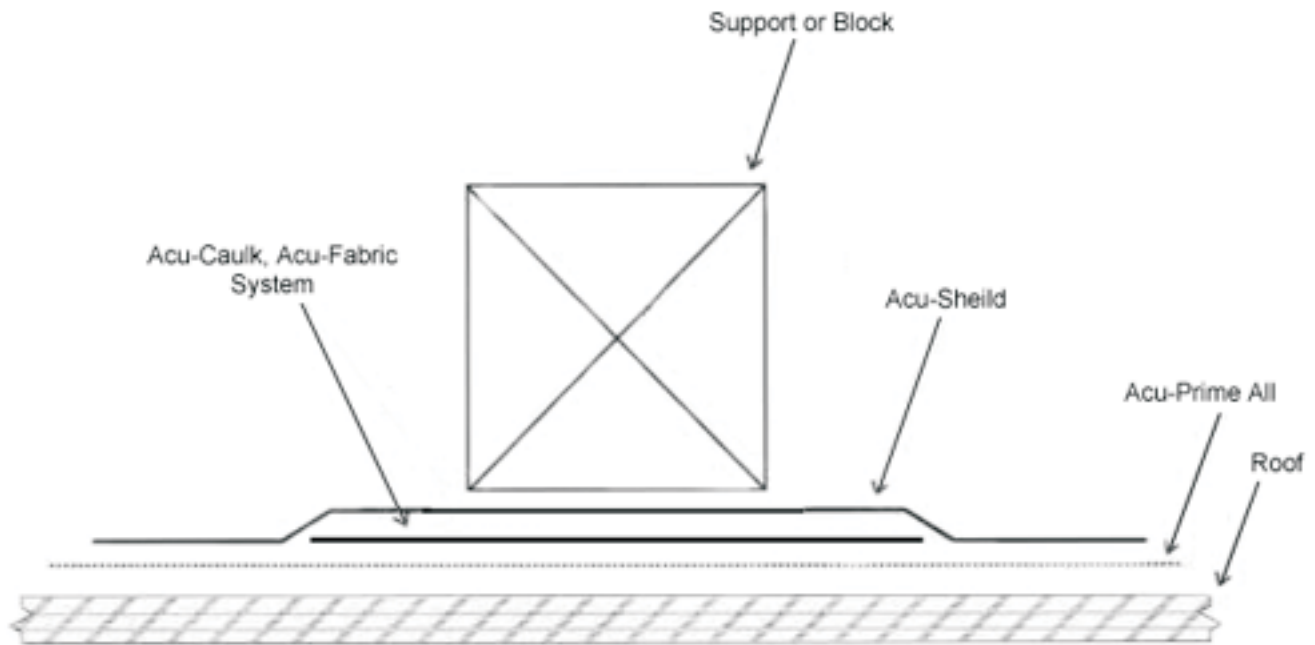

1. Entire roof shall be primed with ACU-PRIME ALL at a rate of 200 square feet per gallon. ACU-PRIME ALL must be allowed to cure for 24 hours.
2. Apply a heavy coat of ACU-CAULK:BG on the roof surface where the support block will be placed. Place an appropriate strip of ACU-FABRIC onto the wet ACU-CAULK:BG. Work ACU-FABRIC into ACU-CAULK:BG using a brush, roller, or soft bristle deck broom to eliminate air pockets, puckers, wrinkles, gaps or folds. Apply a second coat ACU-CAULK:BG as necessary to fully encapsulate the ACU-FABRIC. Make sure to extend the ACU-CAULK:BG at least 4" past the ACU-FABRIC.
3. Apply ACU-SHIELD elastomeric coating by airless spray equipment, using a multi-pass spray technique to ensure an even application to the entire roof surface. (See coating application for proper application rate of our ACU-SHIELD system).

Our suggested installation specifications are based on information from laboratory and field testing which we believe to be reliable and correct; however, accuracy and completeness of said tests are not guaranteed and not to be construed as a warranty, either expressed or implied. Since the use of the material is beyond manufacturer's control, buyer assumes all risk whatsoever as to their use or results obtained. We guarantee our products to conform to Advanced Coating Systems, Inc. quality control. Advanced Coating Systems, Inc. warrants only the standard quality of material. Manufacturer's sole responsibility shall be to replace that portion of the product of this manufacturer which proved to be defective.